
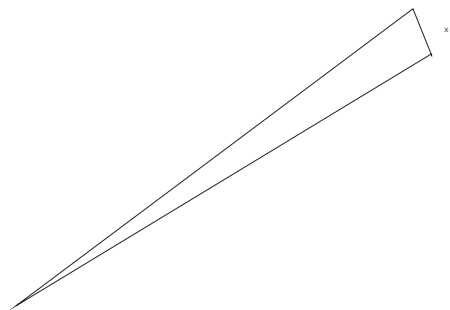


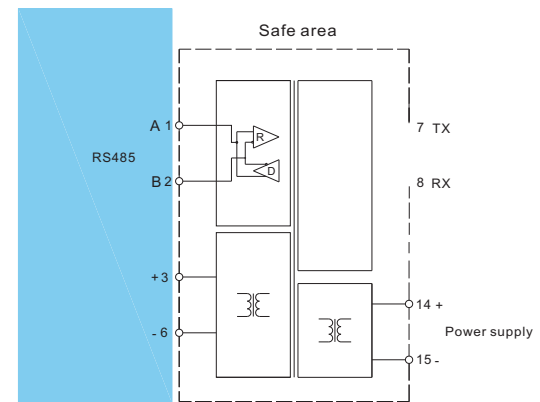

H

E

S

R

the hazardous area.

shown, pull downward the springs, and rotate the safety barrier.

→ Installation

○ The apparatus can be installed on the DIN 35 mm standard rail which is

C. Remove the safety barrier as arrow shows.

○ As far as possible to mount it vertically, In order to dissipation the heat of the apparatus.

Vertically installation

→ Light indication

○ **PWR**: Power indicator light shows green, it means work normally.

○ **TX (yellow)**: The indicator flashes while data sending and turns on when sending data fails. Otherwise, the indicator turns off when normal.

○ **RX (green)**: The indicator flashes while data receiving and turns on when receiving data fails. Otherwise,the indicator turns off when normal.